


EXTENSION UPRIGHT

ASY 018

INSTALLATION INSTRUCTIONS

- 1** Remove upright caps (if any) by inserting screwdriver into top slot of upright and prying up.
- 2** IMPORTANT! Insert pencil, screwdriver, or similar object completely through upright at SEVENTH SLOT from the top. THIS IS TO PREVENT CONNECTOR FROM ACCIDENTALLY FALLING TO BOTTOM OF UPRIGHT.
- 3** Loosen the three screws of extension upright connector... USE 3/16" ALLEN WRENCH (NOT PROVIDED).
- 4** Insert connector into top of upright and seat extension upright against upright.
- 5** Tighten the three screws, remove pencil from seventh slot... REPEAT STEPS 2 THROUGH 5 WITH REMAINING EXTENSION UPRIGHTS.
- 6** If backs will be inserted, skip to step 8.
- 7** Replace upright caps and snap on extension upright end covers, if any.

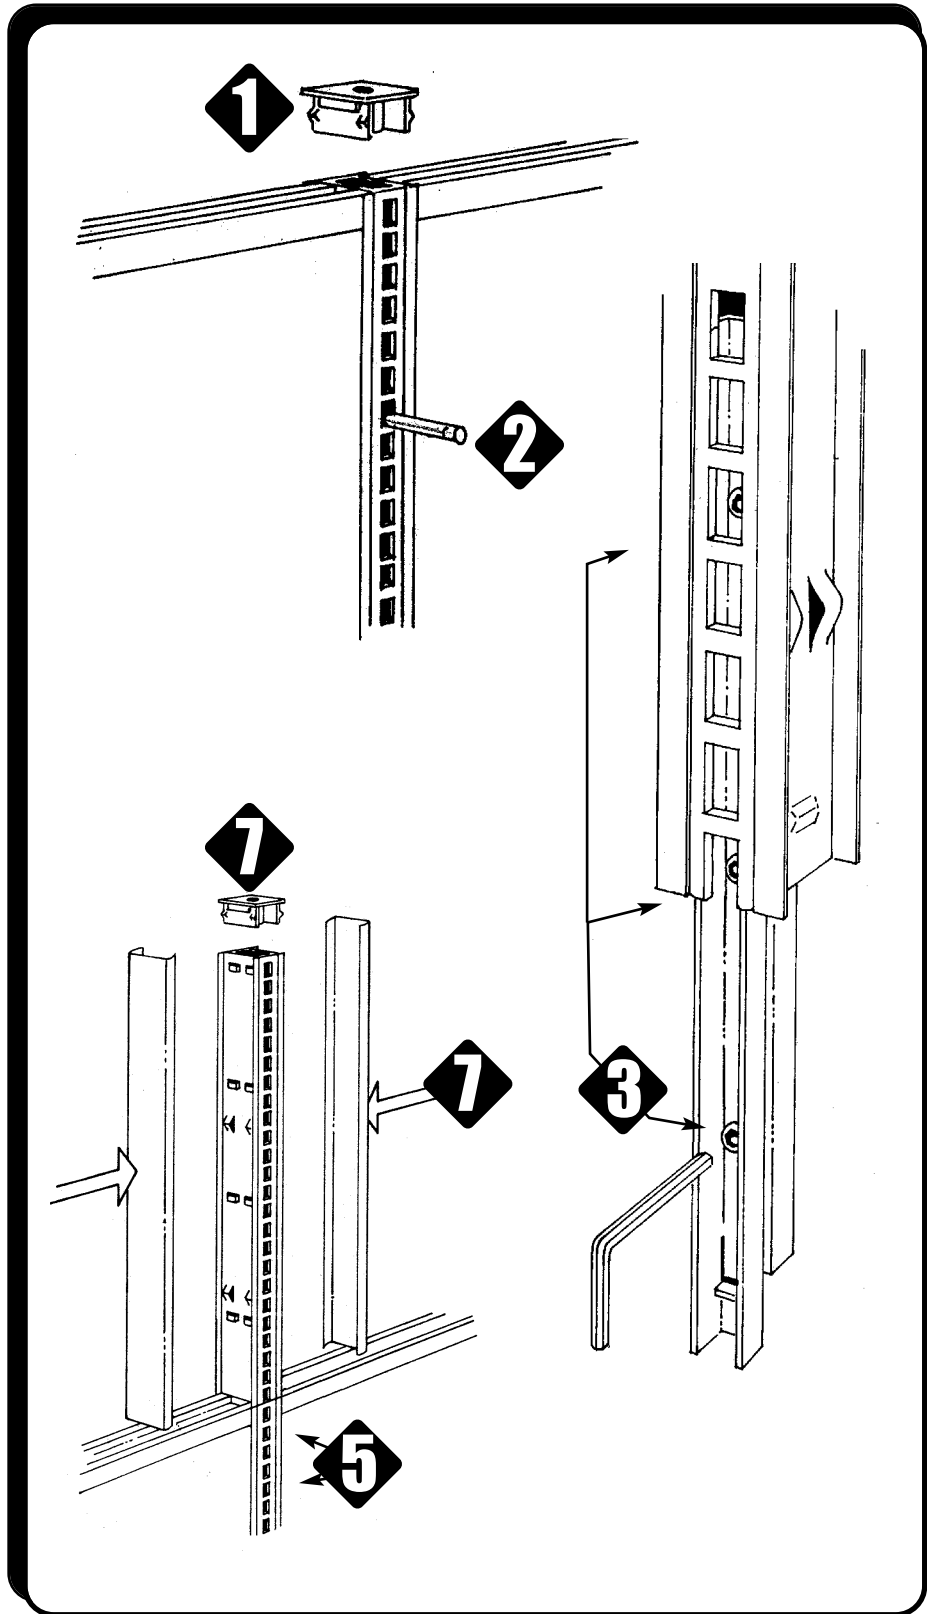


EXTENSION UPRIGHT

ASY 018

INSTALLATION INSTRUCTIONS

- 8** Remove top splicer spanners from all sections to be extended.
- 9** Insert splicer spanners between backs as shown and set in top lances of upright.
- 10** If 48" high extension backs are used, an additional center spanner should be installed at midpoint on the extension upright.
- 11** Install extension backs. Slide them in from the top and **DO NOT** drop on to spanner!
- 12** Re-install upright caps and top spanners at top of extended sections.
- 13** Install extension upright end covers.

ASSEMBLY COMPLETE

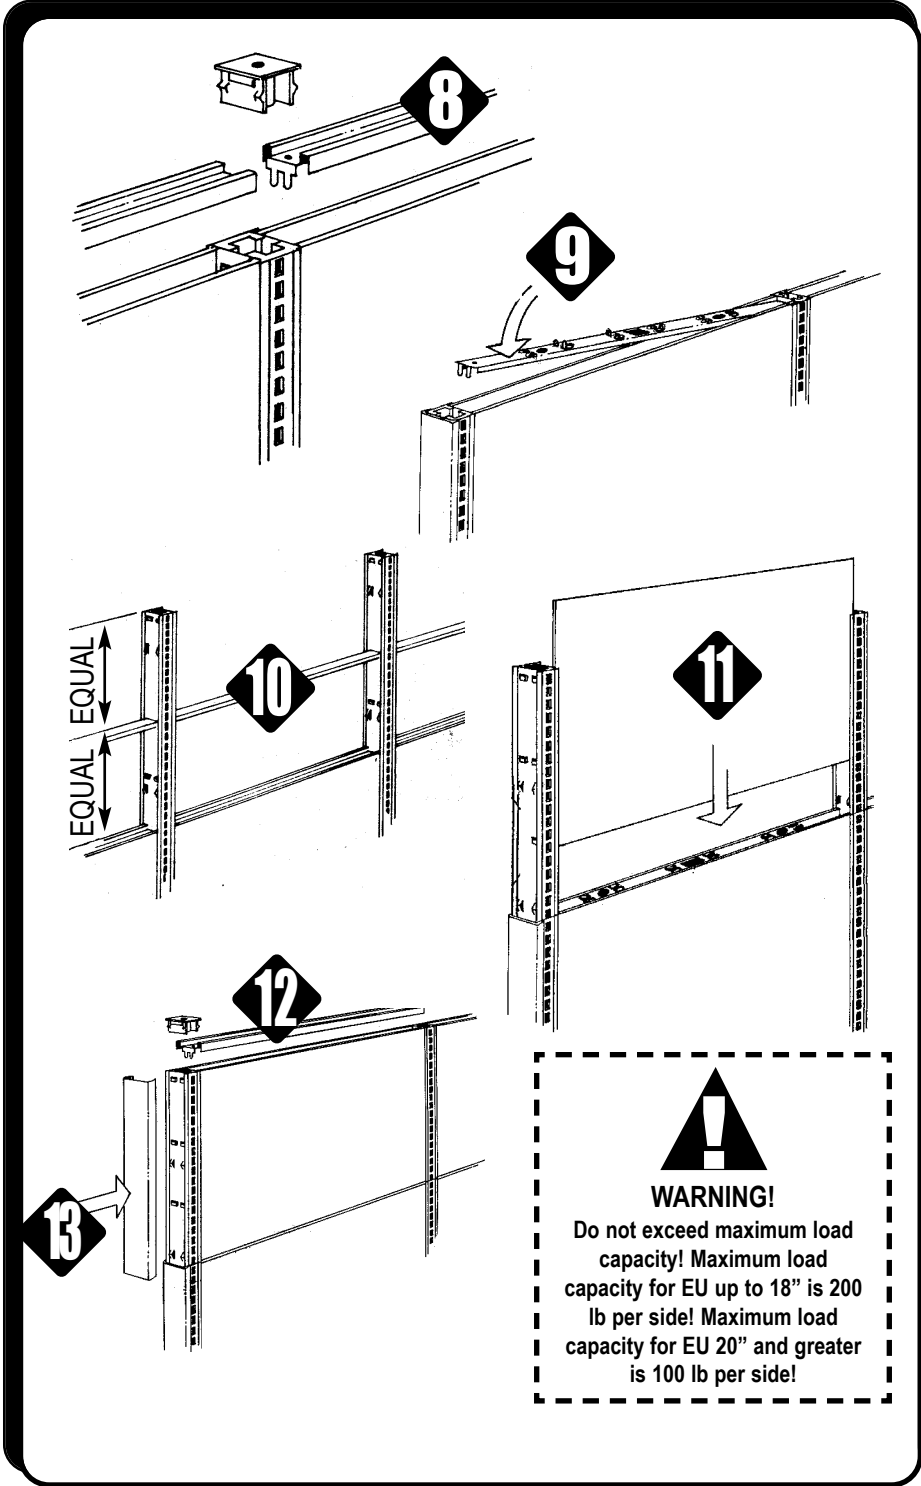

P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
 P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282



REV#	ECN#	REVISION	BY	DATE	REV#	ECN#	REVISION	BY	DATE
A	4869	REVISE LAYOUT & FLOW OF STEPS	ACM	3/20/00					
B	AL002090	add load warning	AJB	8/27/02					
C	AL002112	revise load warning	AJB	9/16/02					