



SNAP METAL DECK DOWN UNTIL IT IS SECURE

SIDE VIEW

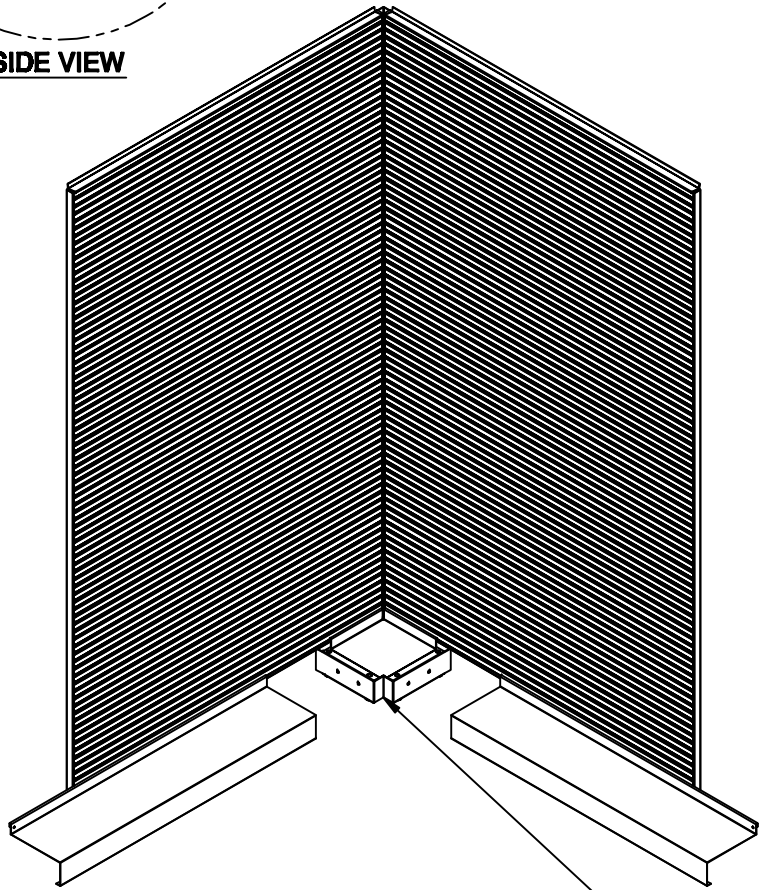

ASSEMBLY VIEW

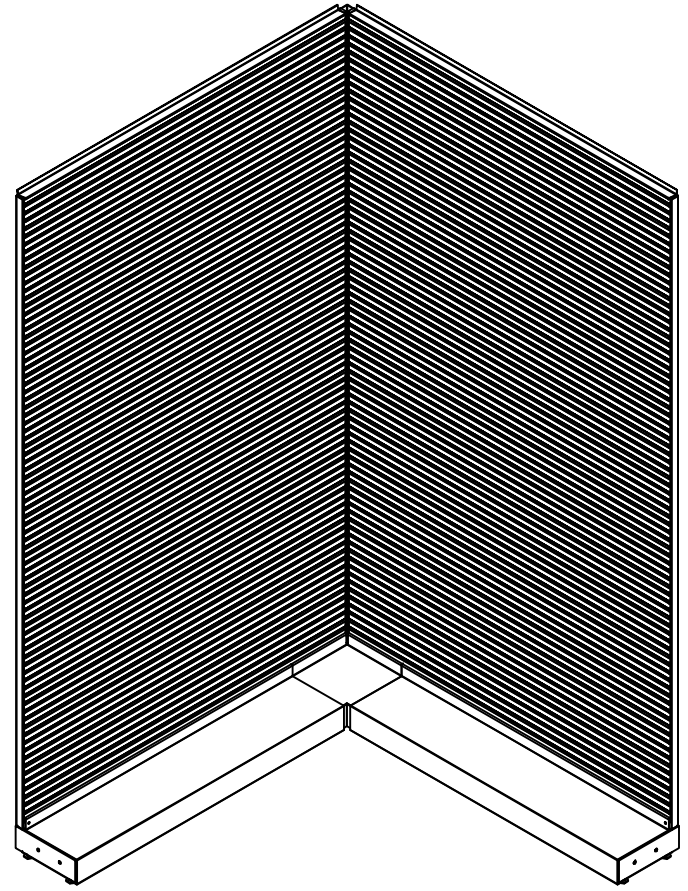

FINISHED VIEW

MAKE SURE TO PLACE THE SYSTEM 88 CORNER BASE INTO PLACE FIRST BEFORE INSTALLING THE METAL DECKS

NOTE:
MAKE SURE THAT YOU PLACE METAL DECK AFTER ALL LEGS ARE BOLTED TOGETHER AND LEVELED

UNIWEB, INC.
We Create Space

12 So. Promenade Ave. Corona Ca, 92679 (951) 279-7800 1-800-4-UNIWEB UNIWEBINC.COM

System 88 Corner Metal Deck

Installation