


STREATER


R-06.07.10 STR-08335-0200

HANGROD ASSEMBLY INSTRUCTIONS

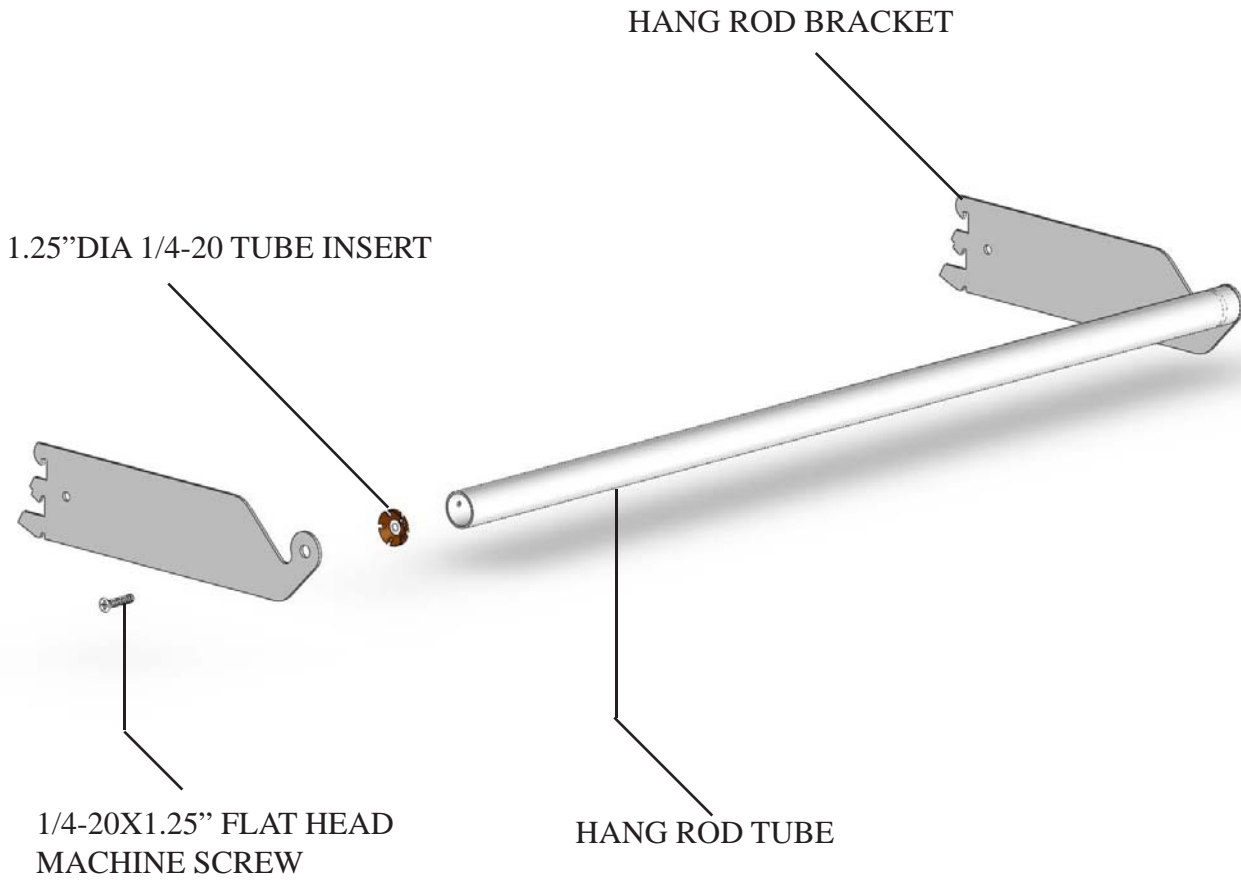

- 1 Fully thread 1/4-20 screw into tube insert. This will avoid stripping the threads. Using a mallet, tap the tube insert about 3/4" into the end of the hang rod tube. Repeat for the other end of the tube. See the figure below.

Tap on top of
screw with
hammer

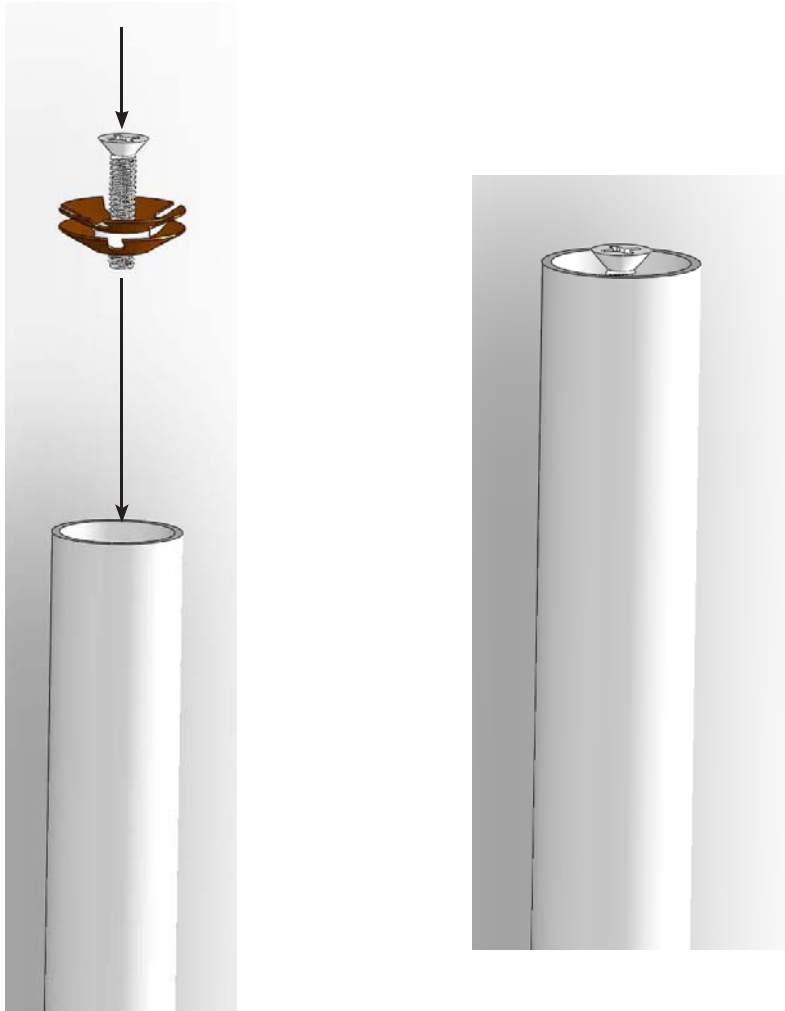

- 2** Remove screw. Secure hangrod bracket to the tube using the same 1/4-20 flat head screw. See illustration below.

