



Contour End Cap (CEB) Assembly

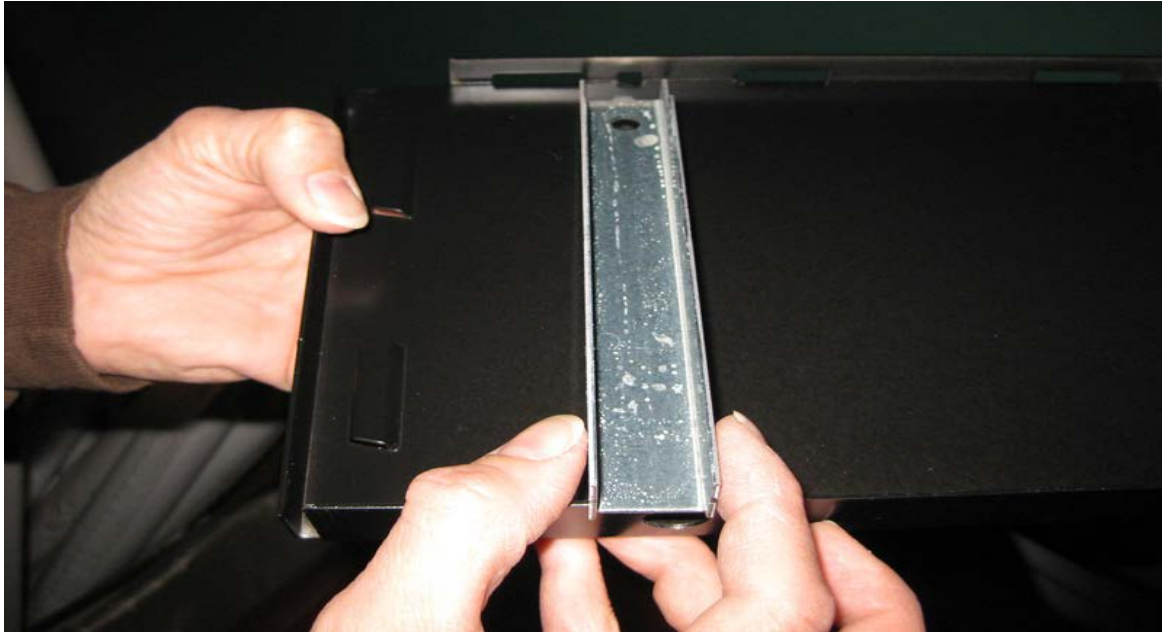

Insert tab on bar into the small hole on the lip.

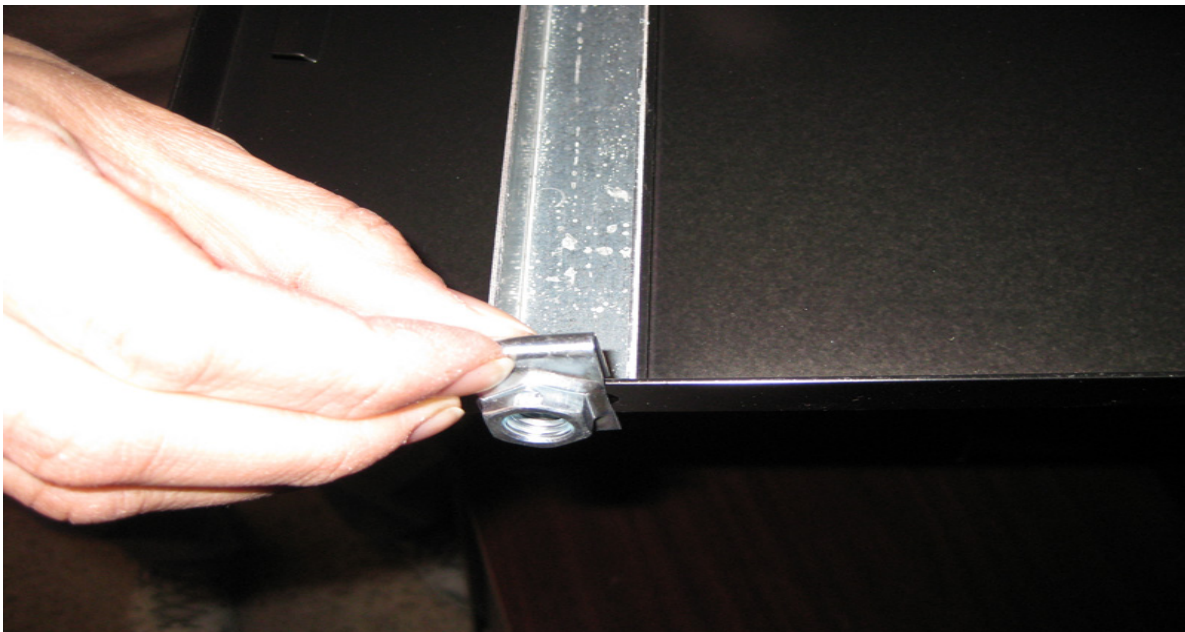

Slip nut over lip and align with hole.



Screw leveler into nut. This will hold in place although some movement is felt.



Once all the levelers are installed.

Slide back plate into place with flanges pointing up.




Slide front plate into place.



Place base deck over box and flip on it's back.

Center black box on the base deck. Insure that this portion of the back of black box is over the back lip of base deck. Use one (1) self tapping screws to attach to the base deck.

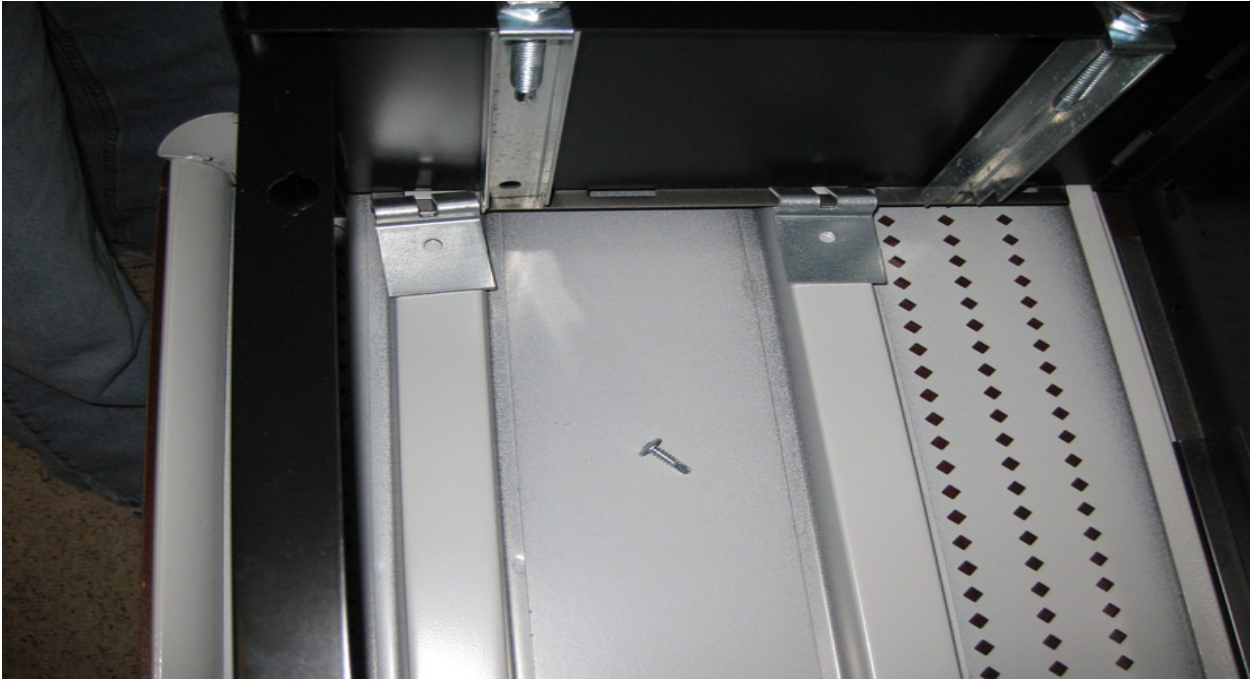

Place clips over brackets as shown on both sides.



Screw into place using self tapping screws included.



Insert from thumb screw into openings on either side of the back. Remove thumb screw and put through opening on the gondola and screw in tight to attach.