
**PAGE 1 OF 4** 

**ASY 066** 

IDENTIFICATION PARTS

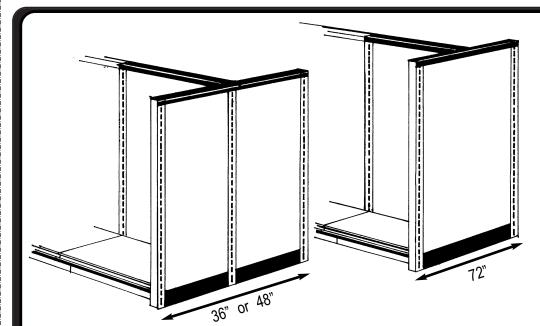


Components for these end displays are ordered individually. Consult installation instruction ASY-046 for identification and use of parts other than those shown below.

ALL CARTONS						
CONTAINING						
WALL SECTION						
ADAPTER KIT						
ARE LABELED						
OPEN						
لتا						
FOURTH						

PART DESCRIPTION	PART NUMBER	<u>QUANTITY X</u> 36" or 48"	<u>WIDTH</u> 72"
BASIC UPRIGHTS	∣ BU-□□	2	3
OPEN BACK STIFFENER, centered slots	OBSCS-□□	1	2
TOP SPANNER	STL-□	1	2
CENTER SPANNER	SC-□	1	2
SPLICER SPANNERS	SS-□	(1)	(2)
BACK PANELS	BH/BP-□□□	2 (4)	4 (8)
UPRIGHT END COVERS	UEC-□□	2	2
WALL SECTION END STABILIZER	WSEMIK-□□	1	1
*WALL TO UPRIGHT FLOOR BRACKET	WTUFB	2	2

• For units over 72" in height, total quantity is shown as (2).

Optional....only if ordered.

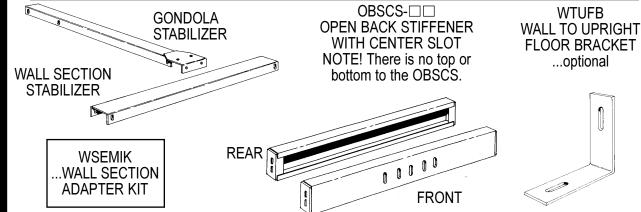







PAGE 2 OF 4

#### **ASY 066**

**REV** 

INSTALLATION INSTRUCTIONS

Bolt the first OBSCS to the first upright through the bottom slot as shown, using the screw, washers and nut from hardware pack #7200-426...OBSCS should be raised until the bottom of the slot hits the screw before tightening securely.


Repeat step 2 to secure the OBSCS to the second upright.

NOTE! If the wall section is to be 72 " wide, join the second upright and both OBSCS together with the same bolt ...then secure the second OBSCS to the third upright as in step 1.

Lay a top spanner, STL, on the OBSCS...the STL must be in the inverted position with the tabs pointing upward and not inserted into spanner lances.

Install the center spanner at the middle of the upright.

NOTE! When installing the back panels, place the front panel above the center slot side of the OBSCS and the rear panel above the open side of the OBSCS. The open side of the OBSCS will be against the gondola upright. Install the front and rear back panels. Install the top spanner.

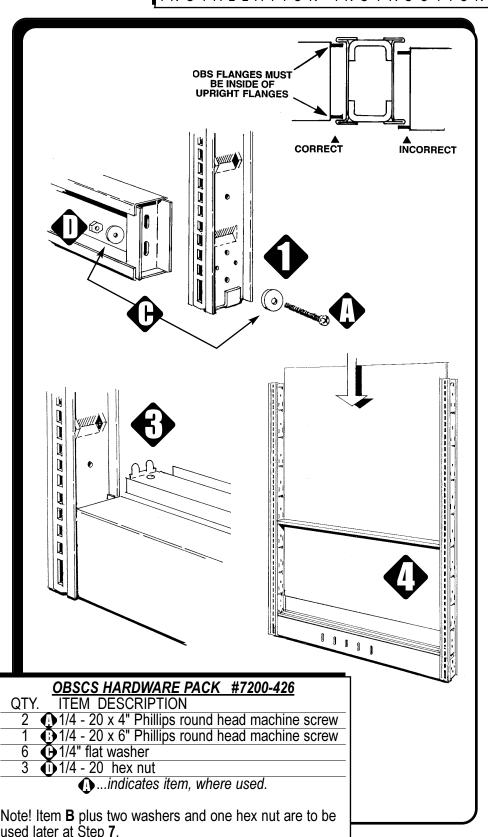



PAGE 3 OF 4

**ASY 066** 

INSTALLATION INSTRUCTIONS


If the unit is 72" wide, repeat steps 3 and 4 with the second section.

If the gondola base shelves are equal, the center slot of the OBSCS should align with the 3/8" dia. hole in the side of the gondola upright. If gondola base shelves are unequal, any difference in width should be as nearly equal at each side to allow aligning an alternate OBSCS slot with the 3/8" diameter hole.

Secure the wall section to the gondola upright as shown with the remaining fasteners from the OBSCS hardware pack...see page 2 for fastener designations. The 6" screw inserts through the selected slot and the 3/8" dia. hole in the side if the gondola upright. Leave the nut slightly loose.

NOTE! If the unit is 72" wide, insert the 6" screw through a slot in the center upright of the wall sections and the 3/8" dia. hole in the side if the gondola upright.

Set wall section stabilizer over the top of the wall section and bolt through the top slot of the uprights as shown... BOTH ENDS.

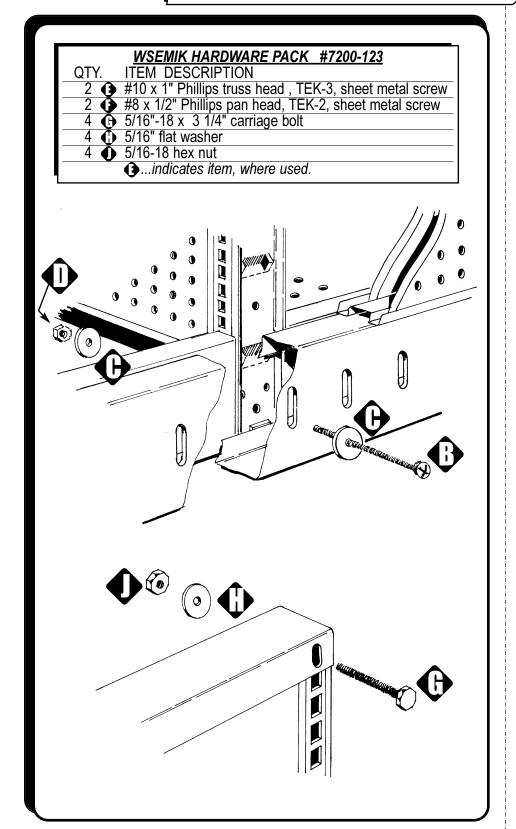



**ASY 066** 

**REV** 

INSTALLATION INSTRUCTIONS

Adjust the levelers to bring the top of the wall section stabilizer flush with the top of the gondola upright... at the same time, use a carpenters level on the wall section to level it side to side.


Tighten the 6" screw inserted at step 7.

Set gondola stabilizer over the gondola and wall section. Secure as shown.

Secure the gondola stabilizer to the second gondola upright as shown.

Secure the gondola stabilizer to the end section stabilizer as shown.


••• OPTIONAL •••
••• FLOOR ANCHORING •••

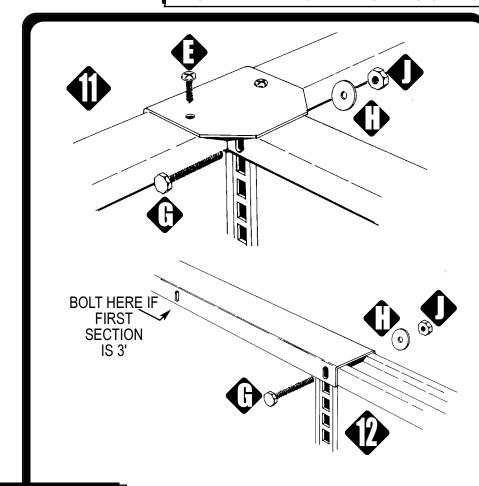

WTUFB	HARDWARE PACK #7200-429
QTY.	ITEM DESCRIPTION
2	5/16"-18 x 3 1/4" carriage bolt
2	5/16" flat washer
2	5/16-18 hex nut
2	3/8"-16 x 3 1/2" expansion bolt
	indicates item, where used.

Secure the WFUFB both wall section uprights as shown with the included hardware, then drill through the oval slot into the floor to install the expansion bolts.

ASSEMBLY COMPLETE

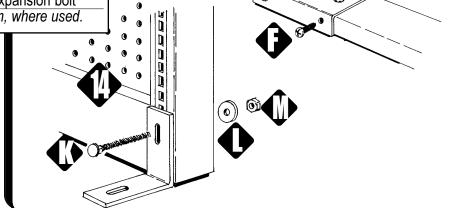



P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349

STORE FIXTURES P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

REV#	ECN#	REVISION	BY	DATE	REV#	ECN#	REVISION	BY	DATE
A	4877	REVISE LAYOUT	ACM	4/19/00					